



[Throttle Body Inlet Hose, B8 Audi S4/S5 3.0TFSI](#)



Supplied Parts:

- 034Motorsport B8 Audi S4/S5 3.0 TFSI Throttle Body Inlet Hose

Tools Needed:

- Hands (2) (*Opposable thumbs are optional*)
- Flathead Screwdriver or 7mm Hose Clamp Driver

Step 1 – Pull the hood release latch inside the passenger compartment, then open the hood.

Step 2 – Observe the stock throttle body inlet tube in its natural habitat. Take a peek at the picture below.



Step 3 – Use flathead screwdriver or hose clamp driver to loosen the hose clamps, labeled A and B.

Step 4 – Remove the hoses labeled C and D from the clips in the stock throttle body inlet tube.

Step 5 – Pull the small vacuum hose labeled E off of the 90 degree nipple in the stock throttle body inlet tube.




Step 6 – Remove the stock throttle body inlet tube from the throttle body and airbox, and set aside.

Step 7 – Install the stock hose clamps onto the 034Motorsport Silicone Throttle Body Inlet Hose. You may have to loosen them further in order to do this.



Step 8 – Install the 034Motorsport Silicone Throttle Body Inlet Hose onto the throttle body and airbox.

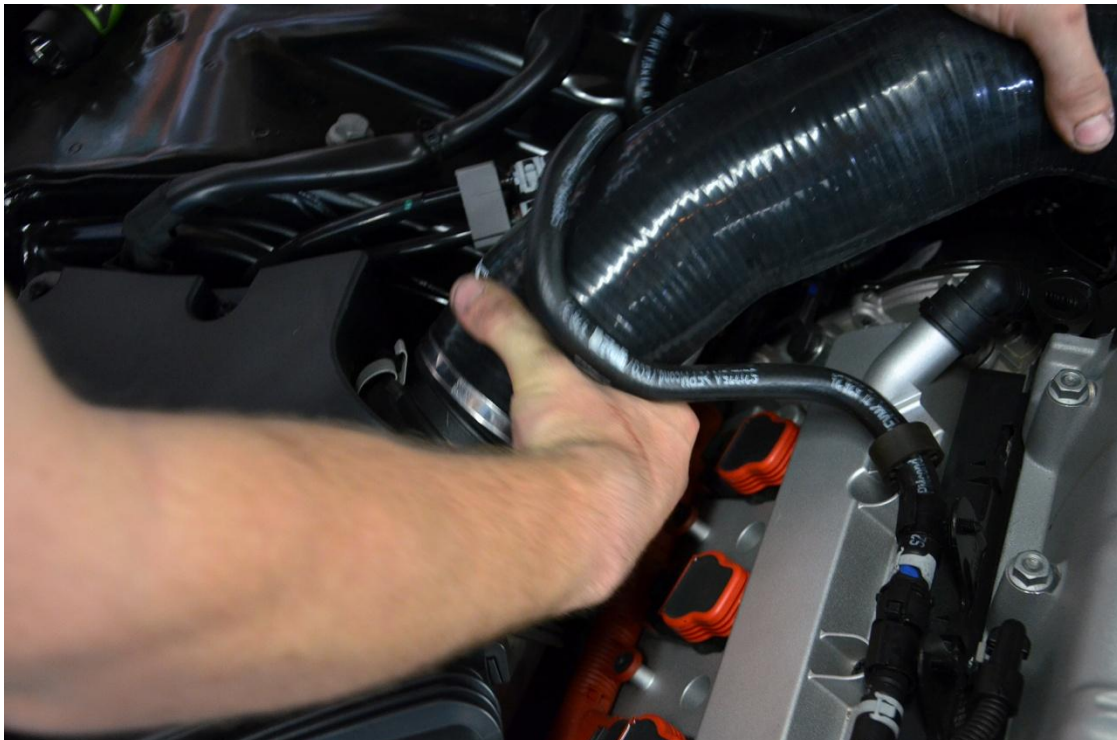


Step 9 – Attach the small vacuum hose from Step 5 onto the new 90 degree nipple in the 034Motorsport Silicone Throttle Body Inlet Hose.



Step 10 – Tighten both hose clamps at the throttle body and airbox.



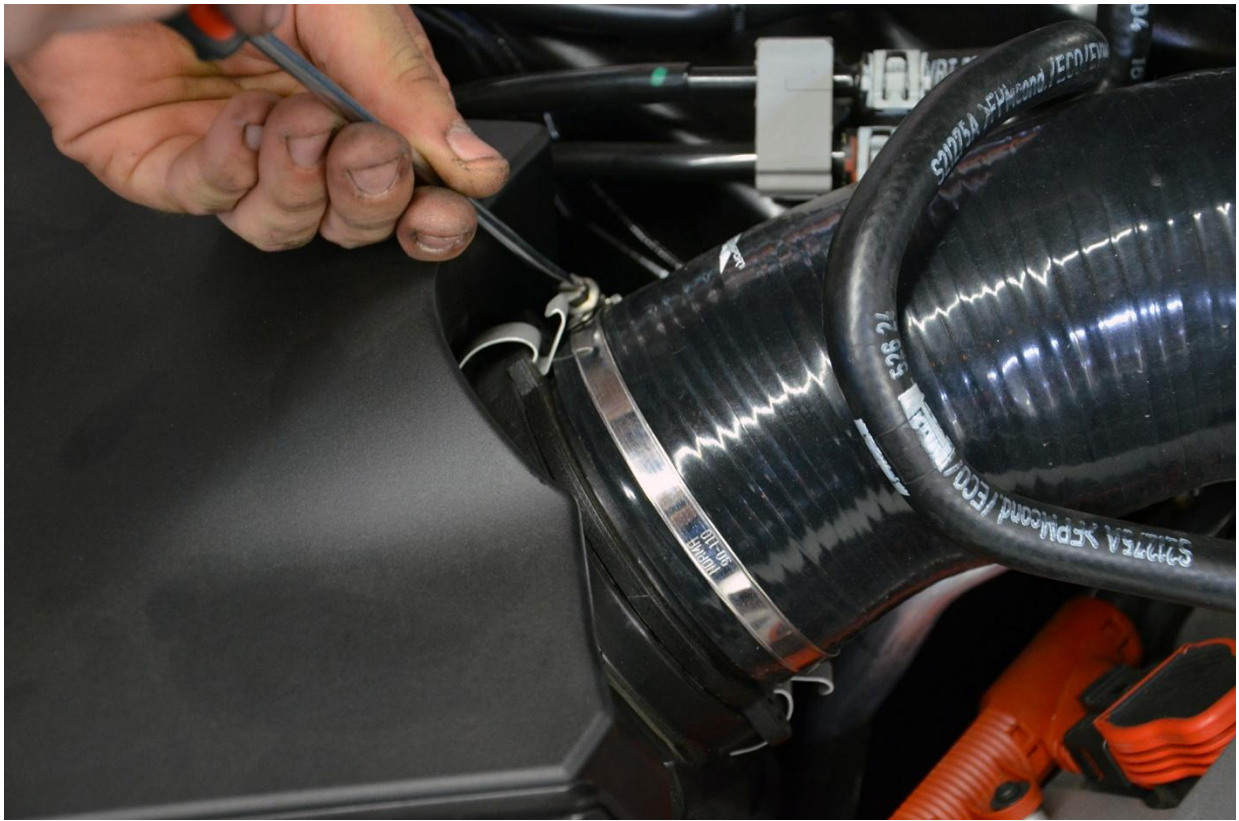

Step 11 – Admire your work!

